VBA17001-R. 3708. A

作成承認印

配布許可印






D4L()X VBA17001


PARTS LIST 修 理 部 品 表





Copyright© 2007 by NIKON CORPORATION.
All Rights Reserved.


無断転載を禁ず!!

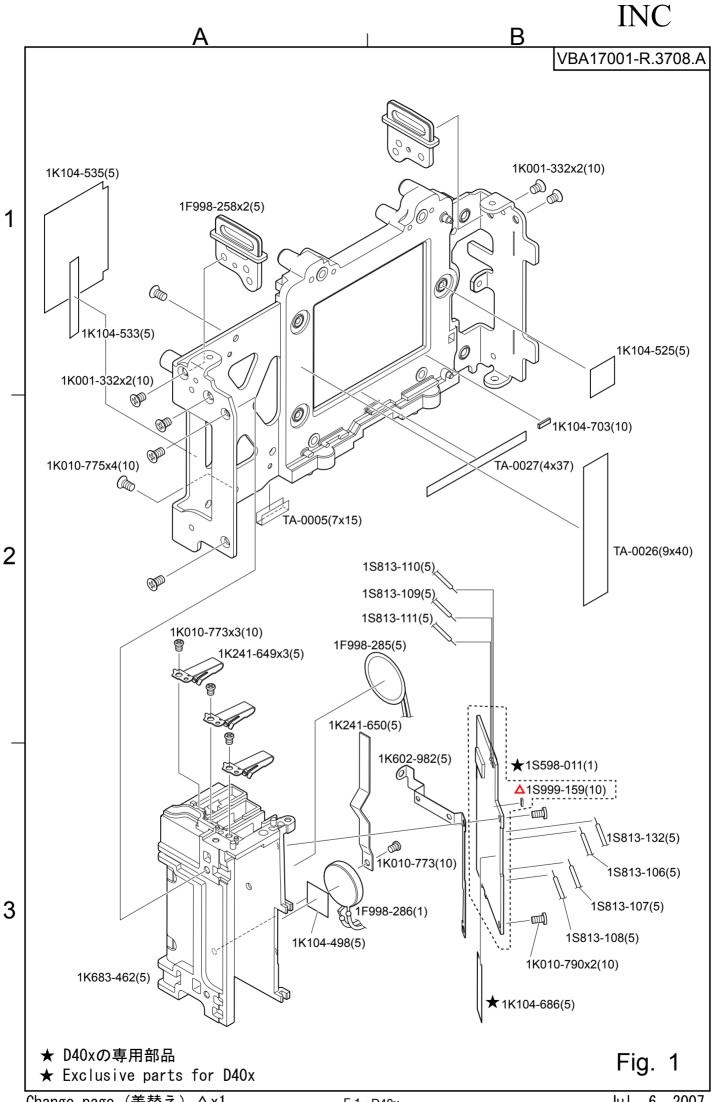


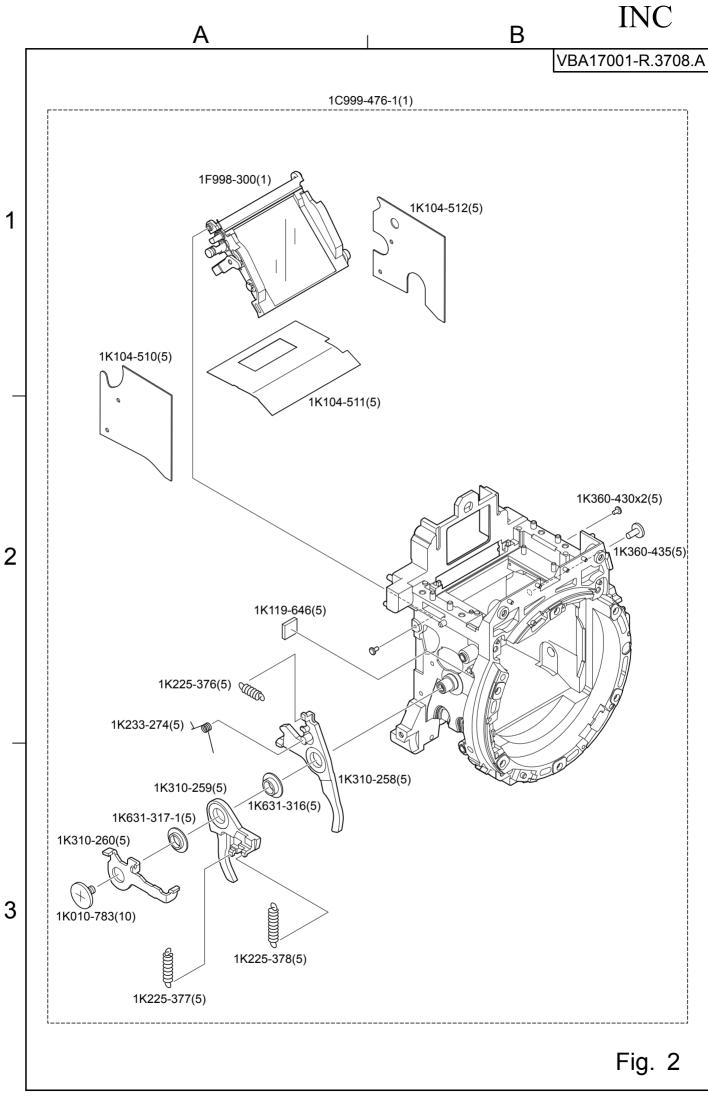


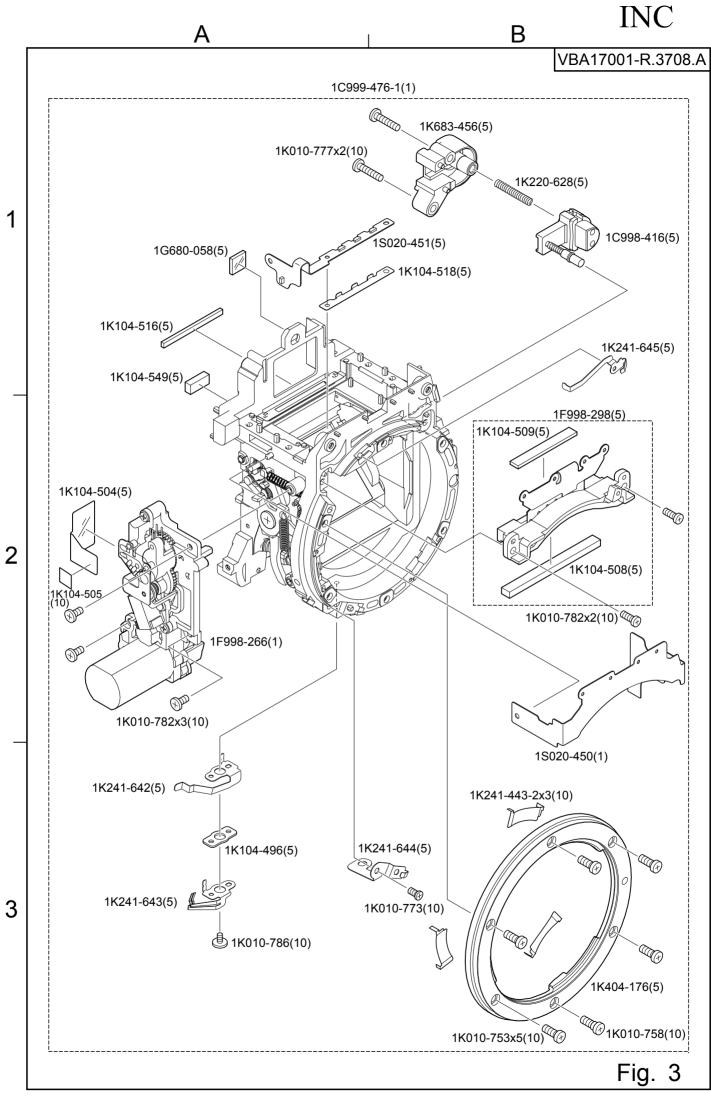


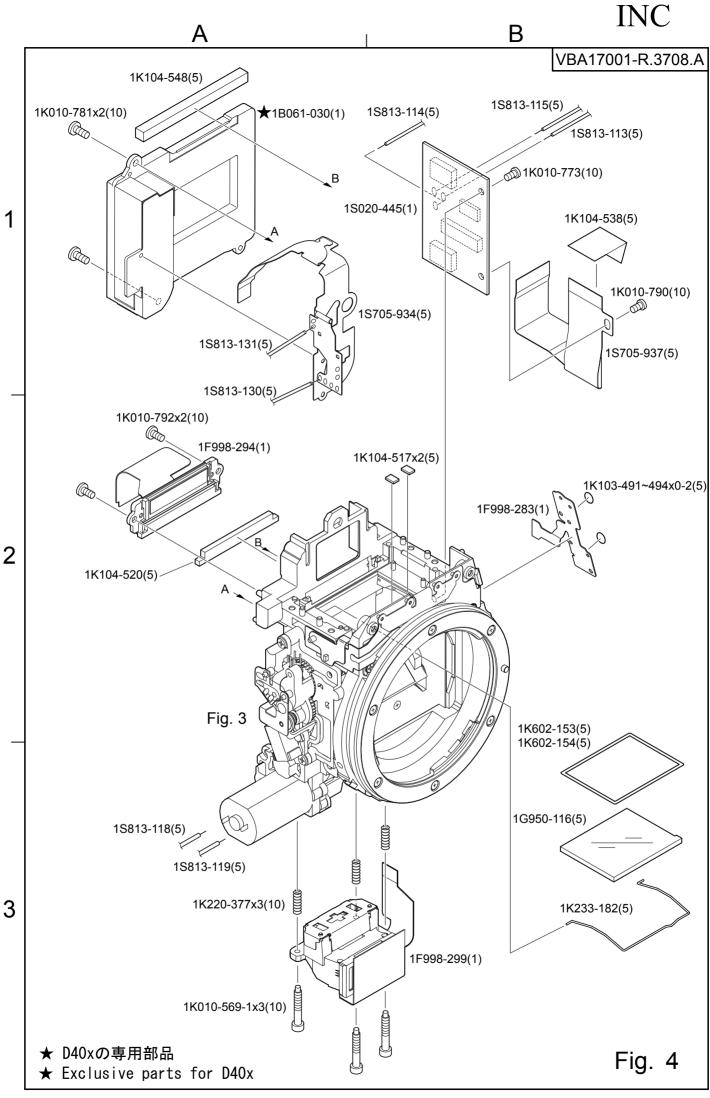


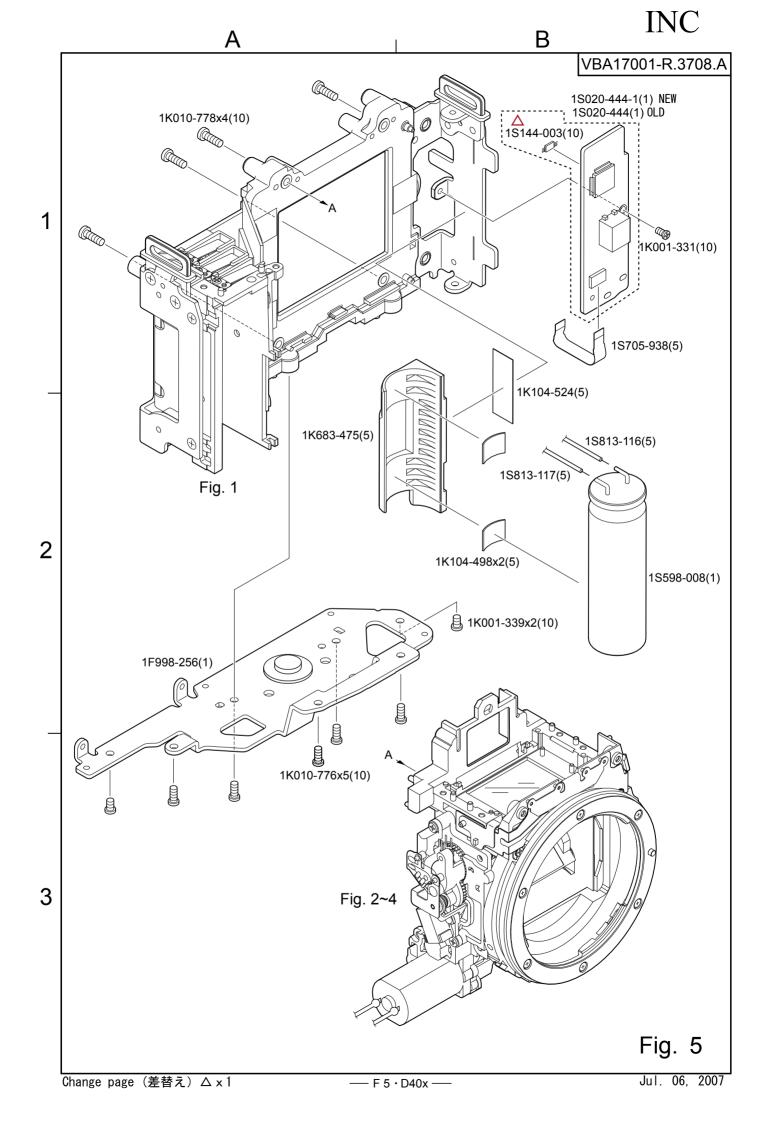


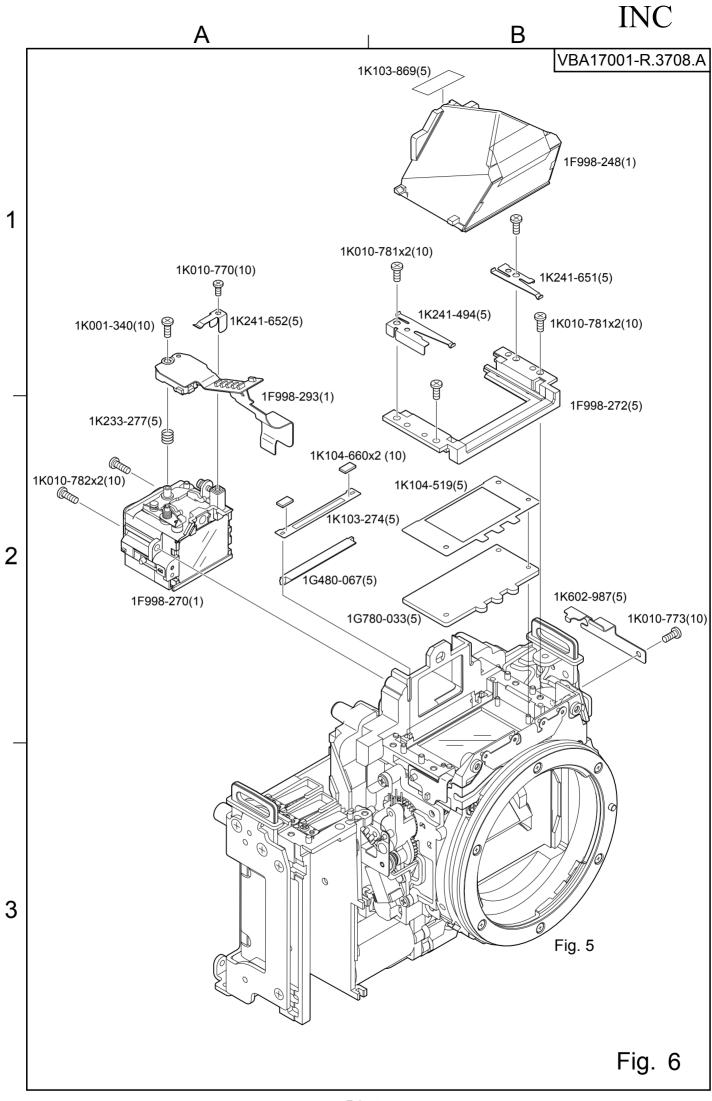


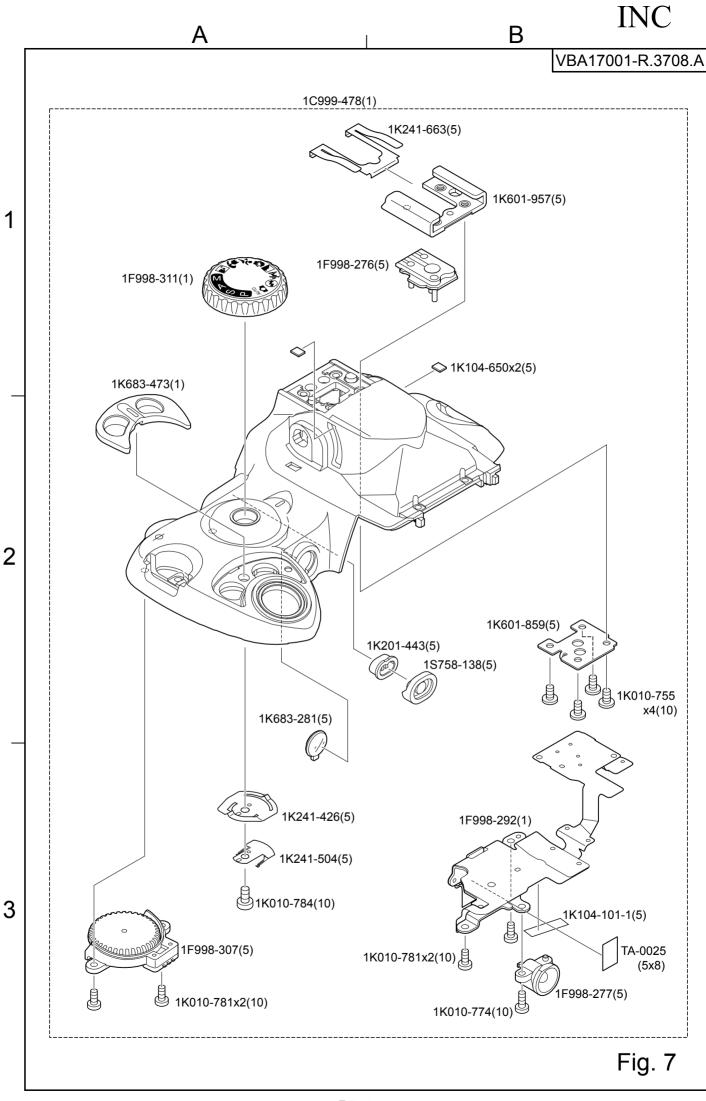


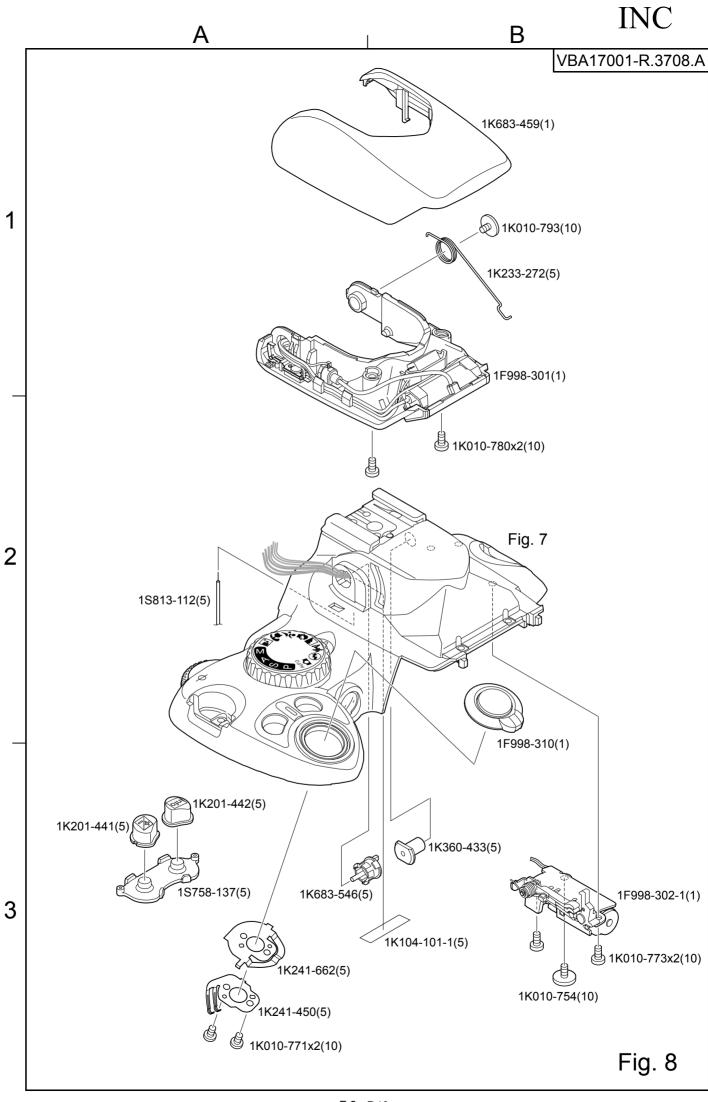

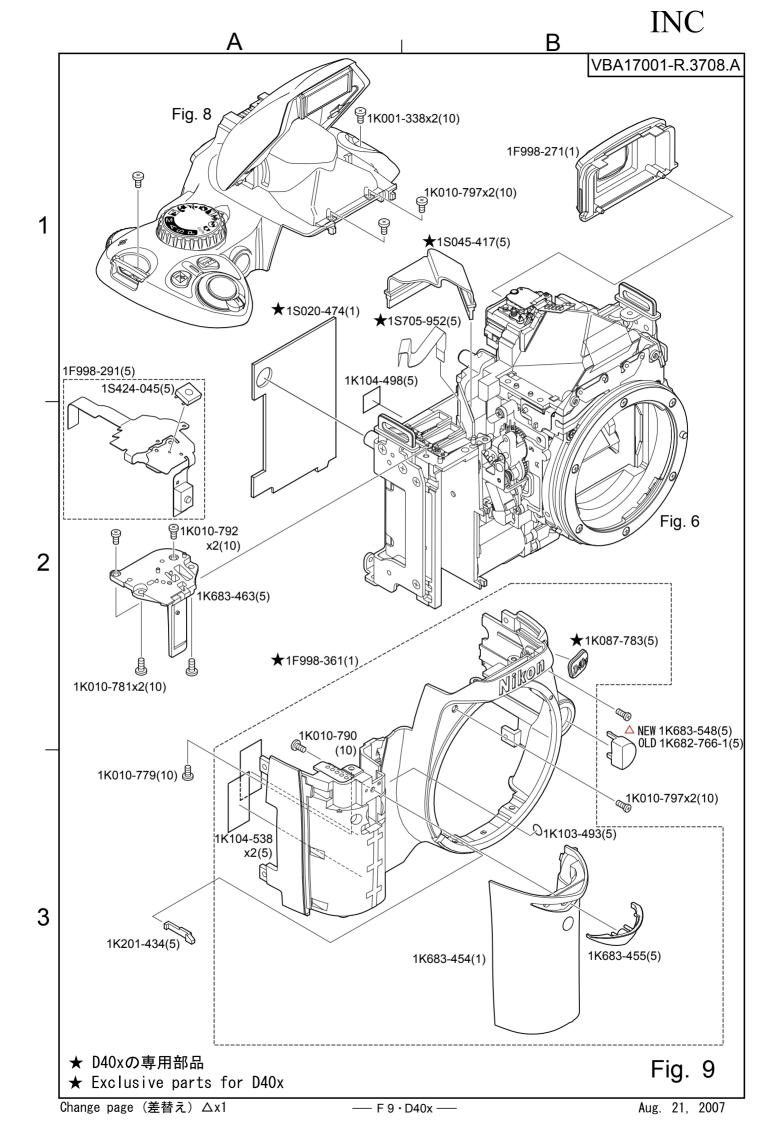

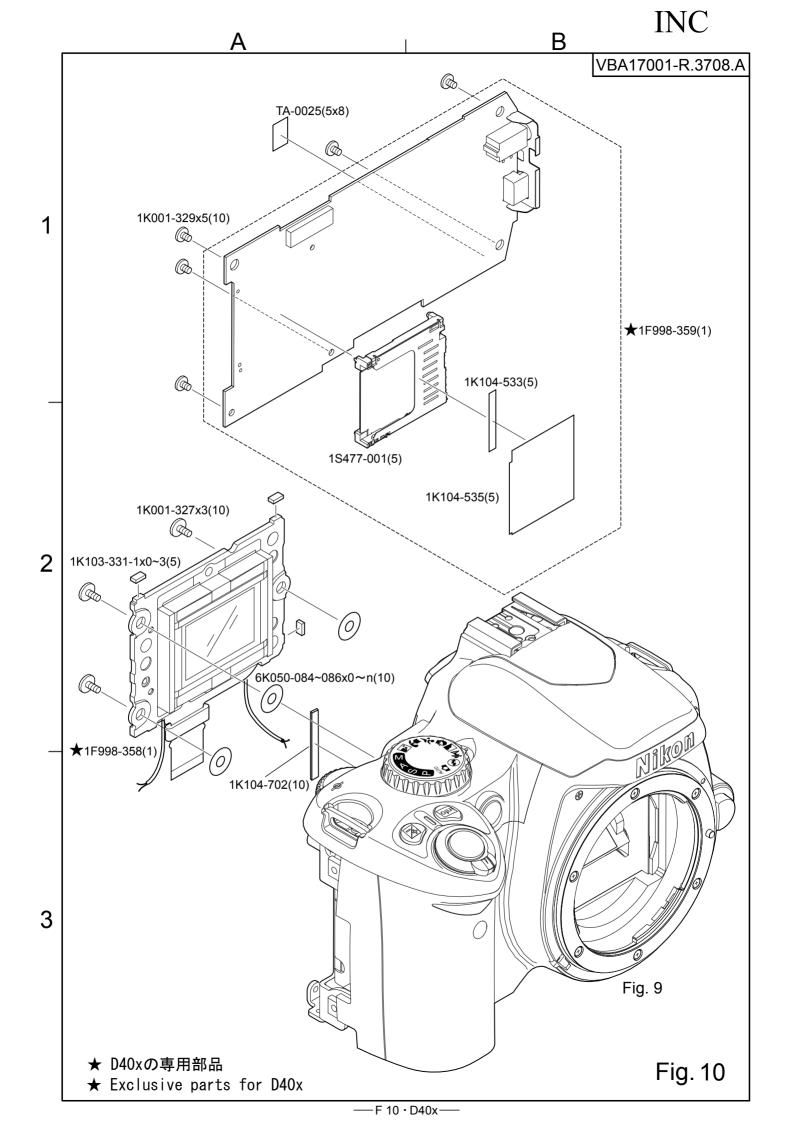

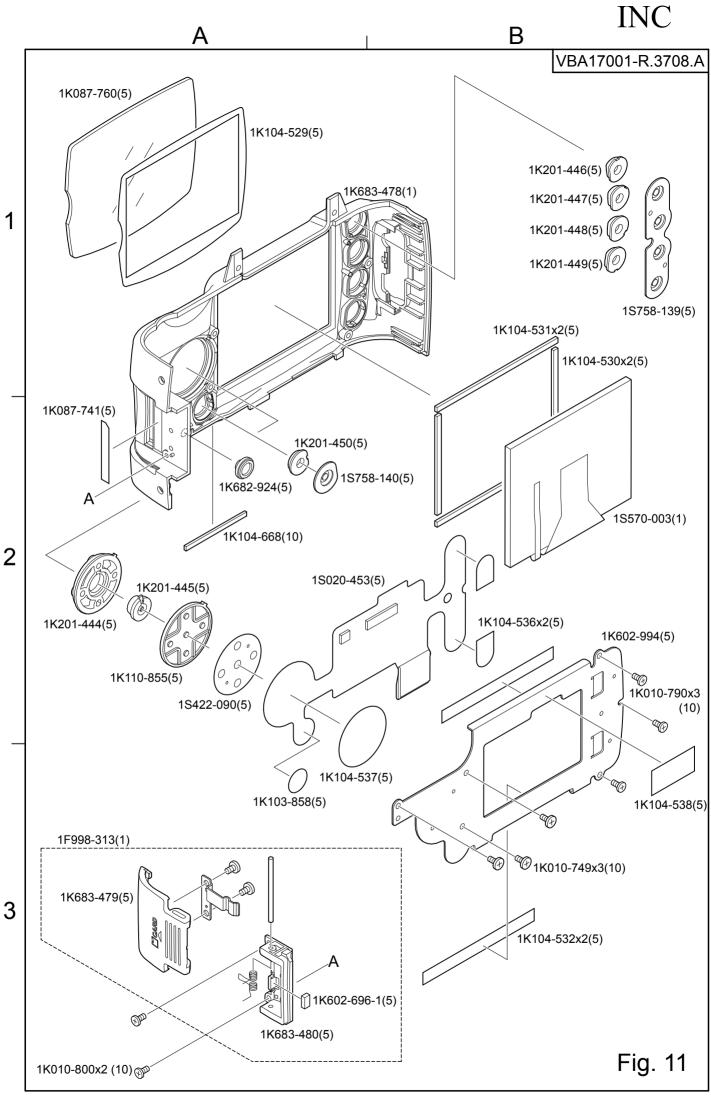

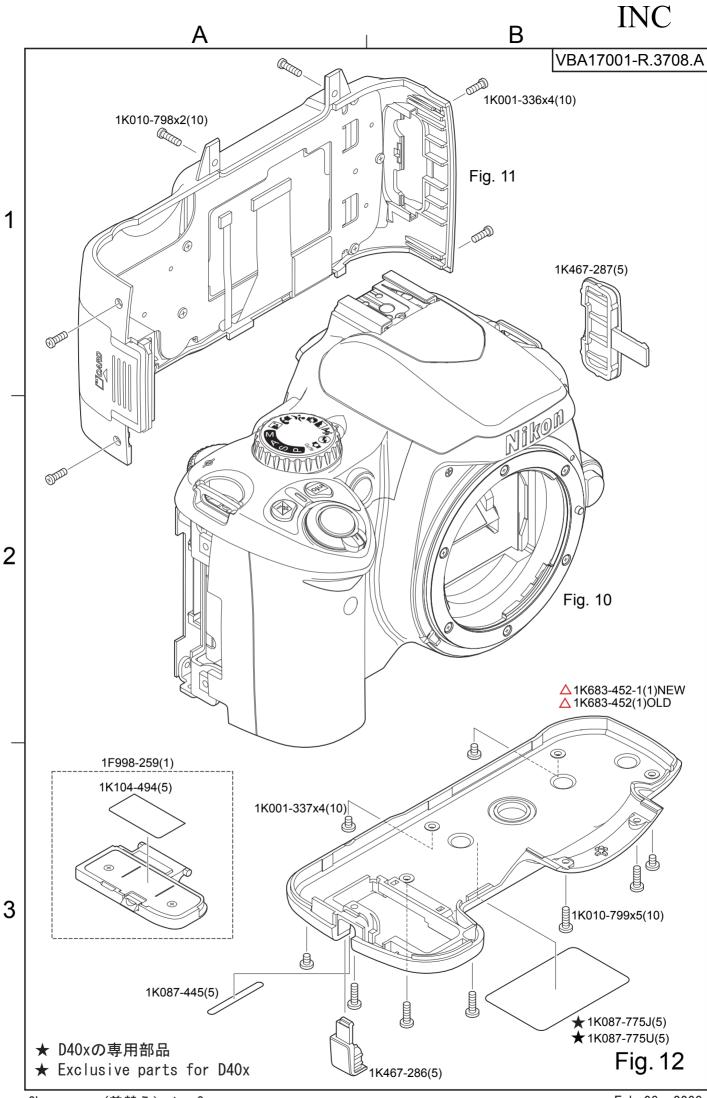

Parts List					D40x	VBA17001-R.3708.A
Part Number Part Code	Barcode (Part Code)	部品名 Part Name	Pcs,/ Unit	fig No.	Main Assembly Q'ty/ Order	Remarks
1B061-030 1B061-030		シャッター SHUTTER	1	4	1	
* 1C998-416 * 1C998-416		着脱釦部組 LENS RELEASE BUTTON UNIT	1	3	5	
1C999-476-1 1C999-476-1		前板部組 FRONT BODY UNIT	1	2,3	1	
* 1C999-478 1C999-478		上カバー部組(BLACK) TOP COVER UNIT(BLACK)	1	7	1	
* 1F998-248 1F998-248		へ [°] ンタ部組 PENTA UNIT	1	6	1	
* 1F998-256 * 1F998-256		底基板部組 BOTTOM BASE PLATE UNIT	1	5	1	
* 1F998-258 * 1F998-258		吊り環部組 EYELET RING UNIT	2	1	5	
* 1F998-259 1F998-259		電池蓋部組 BATTERY CHAMBER UNIT	1	12	1	
* 1F998-266 1F998-266		SQ基板部組 SQ BASE UNIT	1	3	1	
* 1F998-270 1F998-270		接眼鏡筒部組 EYE PIECE BARREL UNIT	1	6	1	
* 1F998-271 1F998-271		接眼枠 EYEPIECE FRAME	1	9	1	
* 1F998-272 1F998-272		SI押え部組 SI RETAINER UNIT	1	6	5	
* 1F998-276 * 1F998-276		シューモールト・部組 SHOE MOLD UNIT	1	7	5	
* 1F998-277 * 1F998-277		AF補助光部組 AF ASSIST LAMP UNIT	1	7	5	
* 1F998-283 1F998-283		SB SW部組 SB SW UNIT	1	4	1	
* 1F998-285 1F998-285		プザー部組 BUZZER UNIT	1	1	5	
* 1F998-286 1F998-286		2次電池 SECOND BATTERY	1	1	1	

Parts List					D40x	VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	Main Assembly Q'ty/	Remarks
Part Code	Dureoue (Ture coue)	Part Name	Unit	No.	Order	Ttomar no
* 1F998-291		SW FPC	1	9	5	
1F998-291		SW FPC 上カバーFPC部組				
* 1F998-292 * 1F998-292		エルバードPC 部組 TOP COVER FPC UNIT	1	7	1	
* 1F998-293		AE FPC部組	1	6	1	
1F998-293		AE FPC UNIT	•		•	
* 1F998-294 1F998-294		F内LCD部組 IN FINDER LCD UNIT	1	4	1	
1F998-298		レンス 接点部組	1	3	5	
1F998-298		LENS CONTACT UNIT				
* 1F998-299 1F998-299		AFセンサー部組 AF-SENSOR UNIT	1	4	1	
1F998-300		ミラー部組	1	2	1	_
1F998-300		MIRROR UNIT			· .	
1F998-301 * 1F998-301		SB下ケース部組 SB LOWER CASE UNIT	1	8	1	
1F998-302-1		SB解除基板部組	1	8	1	
1F998-302-1		SB RELEASE BASE UNIT				
* 1F998-307 1F998-307		C/D部組 C/D UNIT	1	7	5	
1F998-310		レリース゛釦部組	1	8	1	
1F998-310		RELEASE BUTTON UNIT				
* 1F998-311 * 1F998-311		モート゛タ゛イヤル部組 MODE DIAL UNIT	1	7	1	
1F998-313		SD蓋部組	1	11	1	
1F998-313		SD COVER UNIT				
1F998-358 1F998-358		CCD部組 CCD UNIT	1	10	1	
1F998-359		TOGO基板部組	1	10	1	
1F998-359		TOGO PCB UNIT				
1F998-361 1F998-361		前カバー部組 FRONT COVER UNIT	1	9	1	
1G480-067		F内表示用プリズム	1	6	5	
1G480-067	1 100 101 1101	FINDER DISPLAY PRISM				

Parts List					D40 x		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	I VIAIN ASSEMBLY I	Q'ty/	Remarks
Part Code	` ´	Part Name	Unit	No.	,	Order	
* 1G680-058 1G680-058		AEセンサーフィルター AE SENSOR FILTER	1	3	1C999-476-1	5	
1G780-033		SI表示板	1	6		5	_
1G780-033		SI DISPLAY PLATE					
* 1G950-116 * 1G950-116		スクリーン FOCUS SCREEN	1	4		5	
* 1K001-327 1K001-327		ネジ SCREW	3	10		10	
* 1K001-329 * 1K001-329		ネジ SCREW	5	10		10	
* 1K001–331 * 1K001–331		ネシ゛ SCREW	1	5		10	
* 1K001-332 * 1K001-332		ネジ* SCREW	4	1		10	
1K001 332 * 1K001-336 * 1K001-336		ネジ (L=5.5) SCREW (L=5.5)	4	12		10	
* 1K001-337		ネシ゛ SCREW	4	12		10	
1K001-337 1K001-338 1K001-338		ネジ・ SCREW	2	9		10	
1K001-339 * 1K001-339		ネジ・ SCREW	2	5		10	
* 1K001-340 1K001-340		AEセンサー 調整ネジ AE SENSOR ADJUSTMENT SCREW	1	6		10	
* 1K010-569-1 * 1K010-569-1		SCREW SCREW	3	4		10	
* 1K010-749 1K010-749		ネジ SCREW	3	11		10	
* 1K010-753 1K010-753		ネシ゛ SCREW	5	3	1C999-476-1	10	
1K010-754 * 1K010-754		ネシ゛ SCREW	1	8		10	_
* 1K010-755 * 1K010-755		ネジ・ SCREW	4	7	1C999-478	10	
11010 700		33.12.11					

Parts List					D40x		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	Main Assembly	Q'ty/	Remarks
Part Code	·	Part Name	Unit	No.	1120222 1200011029	Order	
* 1K010-758 * 1K010-758		ネシ゛ SCREW	1	3	1C999-476-1	10	
1K010-770		ネジ					
* 1K010-770		SCREW	1	6		10	
* 1K010-771		ネシ゛	2	8		10	_
1K010-771		SCREW					
* 1K010-773 * 1K010-773		ネシ゛ SCREW	9	1,3,4,6 ,8		10	
* 1K010-774		ネジ					
1K010-774		SCREW	1	7	1C999-478	10	
* 1K010-775		ネジ	4	1		10	
1K010-775		SCREW ネシ゛					
* 1K010-776 * 1K010-776		ネソ SCREW	5	5		10	
* 1K010-777		ネジ	2	3	1C999-476-1	10	
1K010-777		SCREW	۷	ა	10999-470-1	10	
* 1K010-778	1 1881 1881 1881 1881 1881 1881 1881 1881 1881 1881 1881	ネシ゛	4	5		10	
1K010-778		SCREW					
* 1K010-779 * 1K010-779		ネシ゛ SCREW	1	9		10	
* 1K010-780		ネジ					
* 1K010-780		SCREW	2	8		10	
* 1K010-781		ネジ	12	4,6,7,9		10	_
1K010-781		SCREW	12	4,0,7,0			
* 1K010-782		ネジ	7	3,6		10	
1K010-782		SCREW ネジ					
* 1K010-783 * 1K010-783		ናን SCREW	1	2	1C999-476-1	10	
* 1K010-784		ネジ	1	7	1C999-478	10	
1K010-784	1 (88)81 (188)11 811 88)81 11811 18811 18811 18811 18811 18811 1881	SCREW	1	,	10000 470	10	
* 1K010-786		ネシ゛	1	3	1C999-476-1	10	
1K010-786		SCREW	•			-	
* 1K010-790 * 1K010-790		ネシ゛ SCREW	7	1,4,9, 11		10	
17010-190		SUREW		- ' '			

Parts List					D40x		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	I VIAIN ASSEMBLY I	'ty/	Remarks
Part Code		Part Name	Unit	No.	Or	der	
* 1K010-792 1K010-792		ネシ゛ SCREW	4	4,9	1	0	
* 1K010-793		ネジ	1	0		0	
1K010-793	1 (88)81 (188)11 811 8131 (181) 8831 (181) 18811 (188) 18818 18118 111 (188)	SCREW	<u> </u>	8	<u> </u>	0	
* 1K010-797 * 1K010-797		ネジ SCREW	4	9	1	0	
* 1K010-798		ネジ	2	12	1	0	
1K010-798		SCREW					
* 1K010-799 * 1K010-799		ネシ゛ SCREW	5	12	1	0	
* 1K010-800		ネシ゛	2	11	1	0	
1K010-800		SCREW	2	'''	·	0	
* 1K087-445 * 1K087-445		原産国テーフ [°] タイラント [*] TAPE	1	12		5	
1K087-741		SDカード挿入指示シール	1	11		5	
1K087-741		SD CARD LABEL	ı	'''	,	J	
* 1K087-760 * 1K087-760		TFT窓 TFT WINDOW	1	11		5	
1K087-775J	1 188181 1188111 811 88181 18111 1881 18811 18811 18881 81818 811118 811 1881	定格銘板					_
1K087-775J		RATING PLATE	1	12		5	
1K087-775U		定格銘板(US)	1	12		5	
1K087-775U 1K087-783		RATING PLATE(US) 銘板					
1K087-783		妇似 NAME PLATE	1	9	1F998-361	5	
* 1K103-274		視野枠2	1	6		5	
1K103-274		FINDER FIELD FRAME 2 ルミラー シート					
* 1K103-331-1 * 1K103-331-1		LUMIRROR SHEET	0-3	10		5	
* 1K103-491		スペーサー	0-2	4		5	
1K103-491		SPACER					_
* 1K103-492 * 1K103-492		スペーサー SPACER	0-2	4		5	
* 1K103-493		スペーサー	0-2	4.9		5	
[*] 1K103-493		SPACER		.,.			

Parts List					D40x		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	i viain Assembivi	'ty/	Remarks
Part Code	` '	Part Name	Unit	No.	O	rder	
* 1K103-494 1K103-494		スペ [°] ーサー SPACER	0-2	4		5	
* 1K103-858 * 1K103-858		両面テープ DOUBLE COATED ADHESIVE TAPE	1	11		5	
* 1K103-869 * 1K103-869		SIゴミ防止テープ DUST PREVENT TAPE	1	6		5	
* 1K104-101-1 1K104-101		テープ TAPE	2	7,8		5	
* 1K104-494 1K104-494		電池装填シール BATTERY LABEL	1	12	1F998-259	5	
* 1K104-496 * 1K104-496		平板 FLAT PLATE	1	3	1C999-476-1	5	
* 1K104-498 * 1K104-498		両面テーフ [°] BOTH SIDED ADHESIVE TAPE	4	1,5,9		5	
* 1K104-504 * 1K104-504		シート SHEET	1	3	1C999-476-1	5	
1K104-505 1K104-505		両面テーフ [°] BOTH SIDED ADHESIVE TAPE	1	3	1C999-476-1	10	
* 1K104-508 * 1K104-508		メインミラー受けモルト MAIN MIRROR SPONGE	1	3	1F998-298	5	
* 1K104-509 * 1K104-509		遮光モル LIGHT SHIELD SPONGE	1	3	1F998-298	5	
* 1K104-510 1K104-510		植毛紙A FLOCKED SHEET A	1	2	1C999-476-1	5	
* 1K104-511 * 1K104-511		植毛紙B FLOCKED SHEET B	1	2	1C999-476-1	5	
* 1K104-512 * 1K104-512		植毛紙C FLOCKED SHEET C	1	2	1C999-476-1	5	
* 1K104-516 * 1K104-516		コ [*] ミ防止モルト DUST PREVENT SPONGE	1	3	1C999-476-1	5	
* 1K104-517 * 1K104-517		モルト SPONGE	2	4		5	
* 1K104-518 * 1K104-518		スーパーインポース [*] 拡散板 SUPER IMPOSE DIFFUSER	1	3	1C999-476-1	5	

Parts List					D40x	VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	Main Assembly Q'ty	Remarks
Part Code		Part Name	Unit	No.	Orde	r
* 1K104-519 * 1K104-519		視野枠1 FINDER FIELD FRAME 1	1	6	5	
* 1K104-520 * 1K104-520		F内表示部防塵部材 DUST PREVENT SEAT	1	4	5	
* 1K104-524 * 1K104-524		両面テープ BOTH SIDED ADHESIVE TAPE	1	5	5	
* 1K104-525 * 1K104-525		防塵テープ DUSTPROOF TAPE	1	1	5	
* 1K104-529 * 1K104-529		TFT窓両面テーフ [°] BOTH SIDED ADHESIVE TAPE	1	11	5	
* 1K104-530 * 1K104-530		防塵モルト DUSTPROOF SPONGE	2	11	5	
* 1K104-531 * 1K104-531		防塵モルト DUSTPROOF SPONGE	2	11	5	
* 1K104-532 * 1K104-532		両面テーフ [°] BOTH SIDED ADHESIVE TAPE	2	11	5	
* 1K104-533 1K104-533		両面テーフ [°] BOTH SIDED ADHESIVE TAPE	2	1,10	5	
* 1K104-535 * 1K104-535		カバー板 COVER PLATE	2	1,10	5	
* 1K104-536 * 1K104-536		両面テープ BOTH SIDED ADHESIVE TAPE	2	11	5	
* 1K104-537 1K104-537		両面テープ BOTH SIDED ADHESIVE TAPE	1	11	5	
* 1K104-538 * 1K104-538		ショート防止テーフ [°] TAPE	4	4,9, 11	5	
* 1K104-548 * 1K104-548		モルト SPONGE	1	4	5	
* 1K104-549 * 1K104-549		モルト SPONGE	1	3	1C999-476-1 5	
* 1K104-650 * 1K104-650		SBアップ衝撃吸収ゴムA SB CUSHION RUBBER A	2	7	1C999-478 5	
* 1K104-660 * 1K104-660		スポ [°] ンジ [*] SPONGE	2	6	10	

Parts List					D40x		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	I VIAIN ACCEMBIVI	Q'ty/	Remarks
Part Code	Bureoue (1 ure coue)	Part Name	Unit	No.	C	Order	Temarks
* 1K104-668		モルト	1	11		10	
1K104-668		SPONGE					
1K104-686 1K104-686		ショート防止テープ TAPE	1	1		5	
1K104-702		モルト	1	10		10	
1K104-702	1 188181 188111 881 1811 813 1811 1811 1811 1811 1811 1811 1811	SPONGE	Į.	10		10	
1K104-703 1K104-703		モルト SPONGE	1	1		10	
1K110-855		マルチセレクターコンム	1	11		5	
[™] 1K110−855		MULTI SELECTOR RUBBER	'	''		J	
* 1K119-646 * 1K119-646		鳴き防止モルト SPONGE	1	2	1C999-476-1	5	
1K201_424		SPONGE Fmin連動プロック					
* 1K201-434 * 1K201-434		Fmin E到7 1977 Fmin COUPLING BLOCK	1	9		5	
1K201-441		+-/絞り釦	1	8		5	
1K201-441		+-/APERTURE BUTTON					
* 1K201-442 1K201-442		INFO.釦 INFO. BUTTON	1	8		5	
		AF/AEロック釦					
* 1K201-443 1K201-443		AF/AE LOCK BUTTON	1	7	1C999-478	5	
1K201-444		マルチセレクター	1	11		5	
¹ 1K201-444		MULTI SELECTOR	'			J	
* 1K201-445		OK釦	1	11		5	
1K201-445		OK BUTTON					
* 1K201-446 * 1K201-446		背面4連釦A REAR PUSH BUTTON A	1	11		5	
1K201-447		背面4連釦B					
* 1K201-447		REAR PUSH BUTTON B	1	11		5	
* 1K201-448		背面4連釦C	1	11		5	
1K201-448		REAR PUSH BUTTON C					
* 1K201-449 1K201-449		背面4連釦D REAR PUSH BUTTON D	1	11		5	
* 1K201-450		背面削除釦	1	11		5	
1K201-450	1 1881 1188 1 1881 1881 1881 1881 1881 1881 1881 1881 1881 1881 1881 1881 1881	REAR DELETE BUTTON					

Part Code	narks
Part Code	
* 1K220-377	
TNZZU-0Z0	
* 1K225-376 ** 1K225-376 ** 1 2 1C999-476-1 5 MIRROR UP SPRING ** 1 2 1C999-476-1 5	
* 1K225-377 * 1K225-377 * APERTURE ACTUATING SPRING	
1K225-378	
* 1K233-182 * 1K233-182 * 1K233-182 * FOCUS SCREEN RETAINER SPRING	_
1K233-272 * 1K233-272 1K233-272	
1K233-274 * 1K233-274 * 1K233-274 * MIRROR DOWN SPRING	_
* 1K233-277 * 1K233-277	
1K241-426 * 1K241-426	
1K241-443-2 * 1K241-443	
* 1K241-450 * 1K241-450 1K241-450	
1K241-494 * 1K241-494 * 1K241-494	
1K241-504 * 1K241-504 1 7 1C999-478 5 MODE DIAL BRUSH	
* 1K241-642 * 1K241-642 Fmin SW A 1 3 1C999-476-1 5 Fmin SW A	
1K241-643 * 1K241-643 * 1K241-643 * Fmin SW B * Fmin SW B	
1K241-644 * 1K241-644 * 1K241-644	_

Parts List					<i>D40x</i>		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	Main Assembly	Q'ty/	Remarks
Part Code		Part Name	Unit	No.	J. J	Order	
* 1K241-645 1K241-645		マウントGND板B GND PLATE B	1	3	1C999-476-1	5	
1K241-649		 接点バネ					
* 1K241-649		では、これで CONTACT SPRING	3	1		5	
* 1K241-650		電池脱落防止バネ	1	1		5	
1K241-650		BATTERY LOCK SPRING	'				_
* 1K241-651 * 1K241-651		へ°ンタ押さえハ゛ネ2 PENTA SPRING 2	1	6		5	
1K241-652		AE センサー板バネ	1	6		5	
1K241-652		AE SENSOR FLAT SPRING	!			J	
* 1K241-662 * 1K241-662		電源ダイヤルクリックハネ	1	8		5	
1K241-663		POWER DIAL CLICK SPRING シューハ ネ					
* 1K241-663		SHOE SPRING	1	7	1C999-478	5	
1K310-258		ミラーアップレバー	1	2	1C999-476-1	5	
1K310-258		MIRROR UP LEVER 絞り駆動レハー					
* 1K310-259 * 1K310-259		秋り配到レハー APERTURE DRIVING LEVER	1	2	1C999-476-1	5	
* 1K310-260 * 1K310-260		絞りレハー	1	2	1C999-476-1	5	
		APERTURE LEVER	-				
* 1K360-430 * 1K360-430		主ミラー軸 MAIN MIRROR SHAFT	2	2	1C999-476-1	5	
* 1K360-433		SBケース回転軸	1	8		5	
1K360-433		SB CASE ROTATE SHAFT	'			<u> </u>	
* 1K360-435 * 1K360-435		サフ゛ミラ−転向ピン SUB MIRROR PIN	1	2	1C999-476-1	5	
1K404-176		ハ゛ヨネット	1	3	1C999-476-1	5	
¹ 1K404-176		BAYONET	ı	ა	10999-470-1	J	
* 1K467-286 * 1K467-286		電源コート・蓋 POWER CABLE COVER	1	12		5	
1K467-287		I/F蓋		4.0			
* 1K467-287		I/F COVER	1	12		5	
* 1K601-859		シュー裏打ち板	1	7	1C999-478	5	
1K601-859	1 188181 118811 218 2111 2212 1181 1181	SHOE PLATE					

Feb. 08, 2008

Parts List					D40x		VBA17001-R.3708.A
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	Main Assembly	Q'ty/	Remarks
Part Code	Darcouc (1 art couc)	Part Name	Unit	No.	Wain Assembly	Order	Remarks
* 1K601-957		シュー座 SHOE BASE UNIT	1	7	1C999-478	5	
1K601-957 * 1K602-153		SHOE BASE UNIT 合致調整ワッシャー T=0.1					
* 1K602-153		WASHER T=0.1	0-1	4		5	
1K602-154		合致調整ワッシャー T=0.2	0-1	4		5	
1K602-154		WASHER T=0.2	0 1			-	
* 1K602-696-1		SD蓋用ゴム SD COVER RUBBER	1	11	1F998-313	5	
1K602-696-1 1K602-982		DC/DCラグ板					
* 1K602-982		DC/DC LUG PLATE	1	1		5	
1K602-987		AE FPC押さえ板	1	6		5	
1K602-987		AE FPC RETAINER PLATE	'	U		J	
* 1K602-994		TFT押さえ板	1	11		5	
1K602-994 * 1K631-316		TFT RETAINER PLATE Sチャーシ・レハ・ーカラー					
* 1K631-316		S CHARGE LEVER	1	2	1C999-476-1	5	
* 1K631-317-1		絞りレハーカラー	1	2	1C999-476-1	5	
1K631-317-1		APERTURE LEVER COOLER	ļ	2	10999-470-1	<u> </u>	
* 1K682-766-1		着脱釦カバー(ブラック)	1	9		5	OLD RP07063
1K682-766 * 1K682-924		RELEASE BUTTON COVER (BLACK) CFアクセスランプ窓					
* 1K682-924		LAMP WINDOW	1	11		5	
* 1K683-281		AF補助光プロテクタ	-1		10000 470		
1K683-281		AF ASSIST LAMP PROTECTOR	ı	7	1C999-478	5	
* 1K683-452		底カバー	1	12		1	△ OLD RP08016
1K683-452 * 1K683-452-1		BOTTOM COVER 底カバー					
△ * 1K683-452-1 1K683-452-1		展がた一 BOTTOM COVER	1	12		1	NEW RP08016
* 1K683-454		グリップカバー			15000 001		
1K683-454		△ GRIP GLI P COVER	1	9	1F998-361	1	
* 1K683-455		グリップ赤モールド	1	9	1F998-361	5	
1K683-455		GRIP RED MOLD				-	
* 1K683-456 1K683-456		レンス [・] 着脱基板 LENS RELEASE BASE PLATE	1	3	1C999-476-1	5	
1K683-459		SB上ケース					
* 1K683-459		SB UPPER COVER	1	8		1	
1K683-548		着脱釦カバー(ブラック)	1	9		5	NEW RP07063
¹ 1K683-548		RELEASE BUTTON COVER (BLACK)					

Parts List					D40x		VBA17001-R.3708
Part Number	Barcode (Part Code)	部品名	Pcs,/	fig	Main Assembly	Q'ty/	Remarks
Part Code	Darcouc (Fart Couc)	Part Name	Unit	No.	wam resembly	Order	Remarks
* 1K683-462		電池ボックス	1	1		5	
1K683-462		BATTERY CHAMBER					
* 1K683-463		リモコン受けフ [・] ロック	1	9		5	
1K683-463	1 188181 1188111 818 81181 11888 1111 11888 1111 11881	REMOTE BLOCK 上カバー飾り板					
* 1K683-473 1K683-473		エガバー駅中ウ板 COVER PLATE	1	7	1C999-478	1	
1K683-475		メインコンテ・ンサーホルタ・ー					
* 1K683-475		MAIN CONDENSER HOLDER	1	5		5	
1K683-478		背面かが一					
1K683-478		BACK COVER	1	11		1	
1K683-479		SD蓋			45000 040		
1K683-479		SD COVER	1	11	1F998-313	5	
1K683-480		SD蓋ブロック		4.4	15000 010	_	
1K683-480		SD COVER BLOCK	1	11	1F998-313	5	
, 1K683-546		SBケース回転部カラー	1	8		5	
1K683-546		COLLAR	ı	0		5	
1S020-444		SB基板	1	5		1	OLD RP07047
1S020-444		SB BASE PLATE	'	<u> </u>		'	OLD 1(1 07047
1S020-444-1		SB基板	1	5		1	NEW RP07047
1S020-444-1		SB BASE PLATE	·			•	
1S020-445		中継基板	1	4		1	
1S020-445		RELAY PCB					
18020-450		前木ディFPC	1	3	1C999-476-1	1	
1S020-450		FRONT BODY FPC SI LED-FPC					
1S020-451 1S020-451		SI LED-FPC SI LED-FPC	1	3	1C999-476-1	5	
1S020-453		当面FPC					
1S020-453		REAR FPC	1	11		5	
1S020-474		LOFT PCB					
1S020-474		LOFT PCB	1	9		1	
1S045-417		接続ハーネス					
1S045-417		HARNESS	1	9		5	
19144-003		IGBT		_	10000 444 1	10	DD07054
1S144-003		IGBT	1	5	1S020-444-1	10	RP07054
1S422-090		マルチセレクターSW	1	11		5	
S1S422-090		MULTI SELECTOR SW	1	11		<u> </u>	
1S424-045		レリース [*] SW	1	9	1F998-291	5	
`1S424-045		RELEASE SW	ı	3	11 990 291	J	

			D40x	VBA17001-R.3708.A
Part Number 部品名	Pcs,/	fig	Main Assembly Q'ty/	Remarks
Part Code Barcode (Part Code) Part Name	Unit	No.	Order	Kemarks
* 1S477-001 ** 1S477-001 ** SDカート*ホルタ*ー ** SDカート*ホルタ*ー ** SD CARD HOLDER	1	10	5	
1S477-001 SD CARD HOLDER	'	10	J	
* 1S570-003 * 1S570-003 * 1S570-003	1	11	1	
1\$570-003 TFT MONITOR		• •	'	
1S598-008	1	5	1	
15398-008 MAIN CONDENSER				
1S598-011	1	1	1	
10000 VII				
* 1S705-934 * 1S705-934 SQ FPC	1	4	5	
13703-334 34 FFO				
* 1S705-937	1	4	5	
* 1S705−938 接続FPC * 1S705−938 CONNECTION FPC	1	5	5	
1S705-952 接続FPC 1S705-952 CONNECTION FPC	1	9	5	
* 1S758-137	-1	0	5	
*1S758-137	ı	8	ΰ	
1S758−138 	1	7	1C999-478 5	_
1S758-138 AF/AE LOCK BUTTON RUBBER SW	'		10999 470 3	
1S758−139	1	11	5	
15/58-139 REAR PUSH BUTTON RUBBER SW	'	•		
* 1S758-140 * 1S758-140 背面削除釦ラバ-SW REAR DELETE BUTTON RUBBER SW	1	11	5	
1S758-140 REAR DELETE BUTTON RUBBER SW				
* 1S813-106 * 1S813-106 CORD	1	1	5	
* 1S813-107 * 1S813-107	1	1	5	
* 1S813-108 * 1S813-108 CORD	1	1	5	
* 1S813-109 * 1S813-109	1	1	5	
			_	
* 1S813-110 * 1S813-110 CORD	1	1	5	

Parts List					D40x		VBA17001-R.3708.A
Part Number Part Code	Barcode (Part Code)	部品名 Part Name	Pcs,/ Unit	fig No.		Q'ty/ Order	Remarks
* 1S813-111 * 1S813-111		⊐−ŀ* CORD	1	1		5	
* 1S813-112 * 1S813-112		⊐−ŀ [*] CORD	1	8		5	
* 1S813-113 * 1S813-113		⊐−ŀ [*] CORD	1	4		5	
* 1S813-114 * 1S813-114		⊐−ŀ [*] CORD	1	4		5	
* 1S813-115 * 1S813-115		⊐−ŀ° CORD	1	4		5	
* 1S813-116 * 1S813-116		⊐−ŀ° CORD	1	5		5	
* 1S813-117 * 1S813-117		コート [*] CORD	1	5		5	
* 1S813-118 * 1S813-118		⊐−ŀ° CORD	1	4		5	
* 1S813-119 * 1S813-119		⊐−ŀ [*] CORD	1	4		5	
* 1S813-130 * 1S813-130		⊐-ŀ° CORD	1	4		5	
* 1S813-131 * 1S813-131		⊐−ŀ˚ CORD	1	4		5	
* 1S813-132 * 1S813-132		⊐-ŀ° CORD	1	1		5	
* 1S999-159 1S999-159		ヒュース゛ Fuse	1	1	1S598-011	10	RP07054
* 6K050-084 * 6K050-084		ワッシャー(T=0.02) WASHER (T=0.02)	0-n	10		10	
* 6K050-085 * 6K050-085		ワッシャー(T=0.1) WASHER (T=0.1)	0-n	10		10	
* 6K050-086 * 6K050-086		ワッシャー(T=0.06) WASHER (T=0.06)	0-n	10		10	